

## WALKER REPLACEMENT FRONT WHEELS™

### Replacement Wheel Assembly

1. Remove Bolt, Nut and old Wheel from existing walker using included Allen Head Wrench.

Note: Observe the assembled direction of the Bolt and Nut before taking them off.

2. Replace old wheel with new wheel and reassemble the Bolt and Nut as originally assembled.

Stationary  
Assembly

Existing Nut

Existing Bolt

Included Allen  
Head Wrench

